
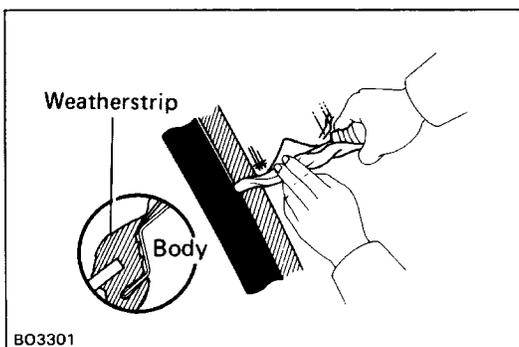



BACK WINDOW COMPONENTS

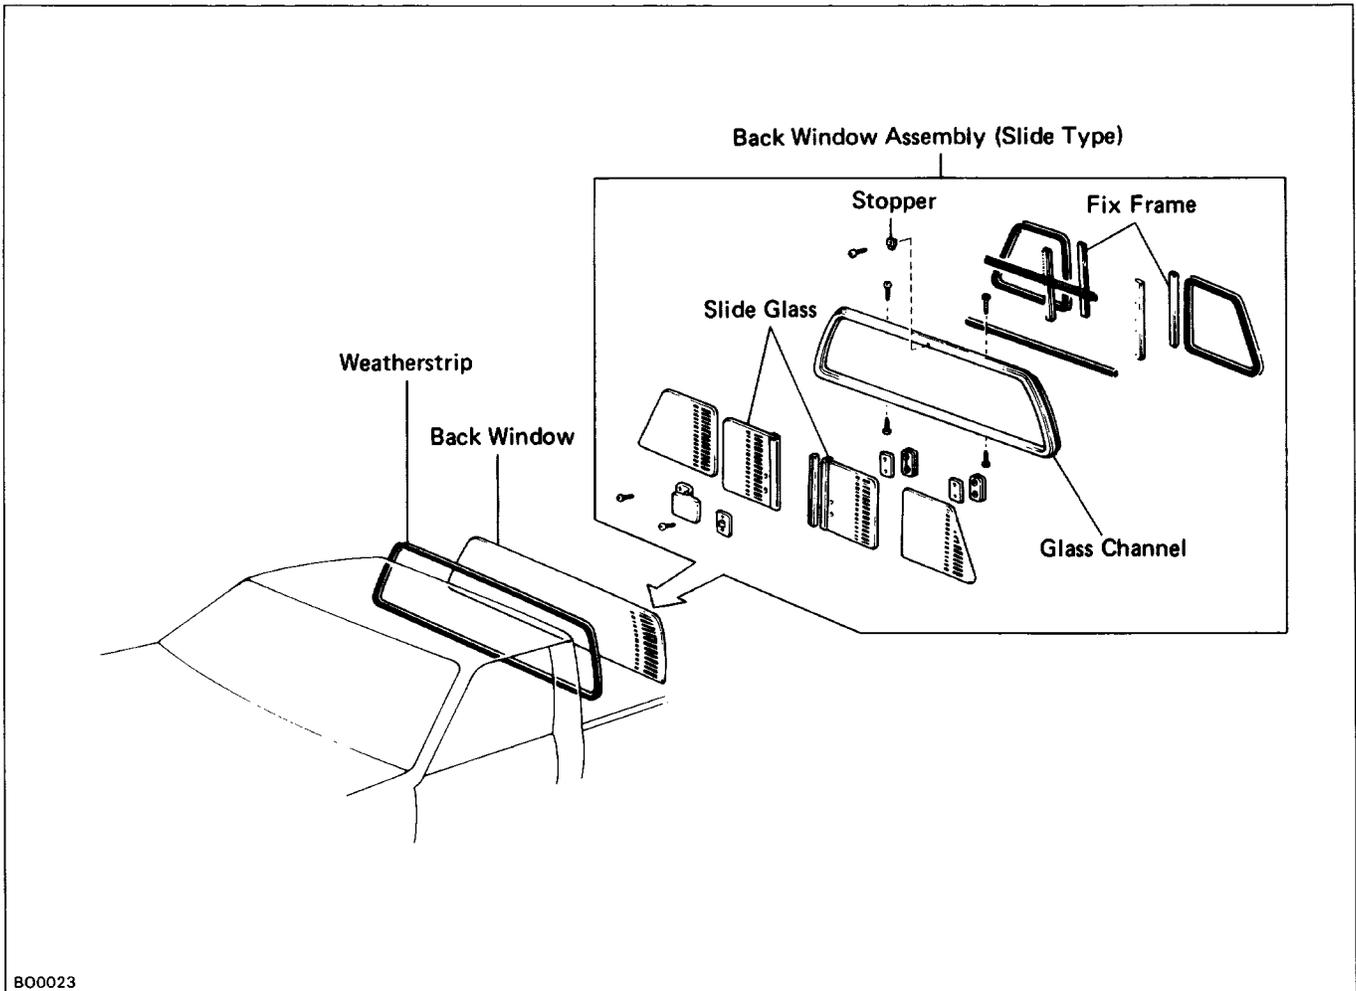

REMOVAL OF BACK WINDOW REMOVE BACK WINDOW


(a) Using a screwdriver, loosen the weatherstrip from the body.

NOTICE: Be careful not to damage the body paint.

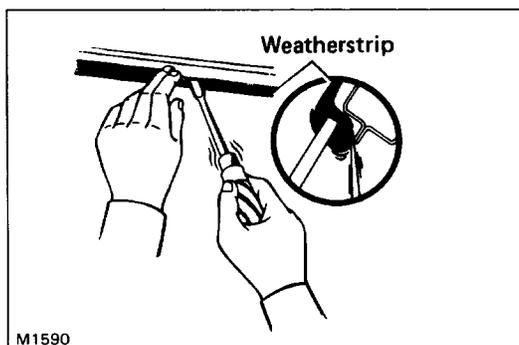

(b) Pry the lip of the weatherstrip outward from the interior part of the body flange.


(c) Pull the glass outwards, and remove it with the weatherstrip.

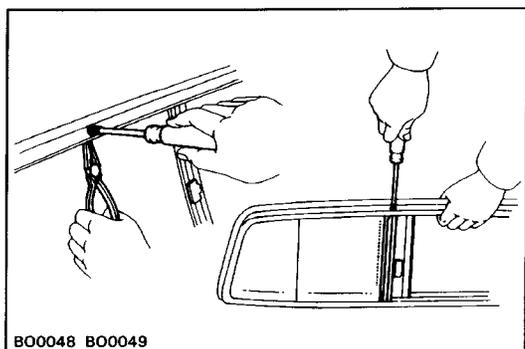

DISASSEMBLY OF BACK WINDOW ASSEMBLY (Slide Glass type)


1. REMOVE FOLLOWING PARTS:

- Back window slide glass stoppers
- Four screws holding two fix frames

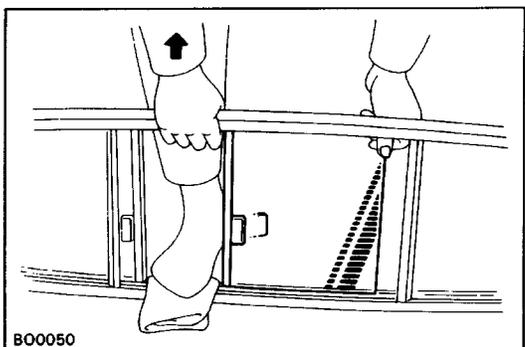


2. REMOVE SLIDE GLASS

Pull apart the channels and remove two slide glass panes at the center area of the glass channel.

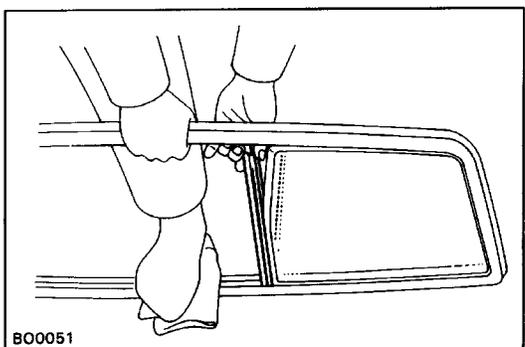

3. REMOVE NON-SLIDE GLASS

(a) Pull apart the channels and remove two fix frames as shown.

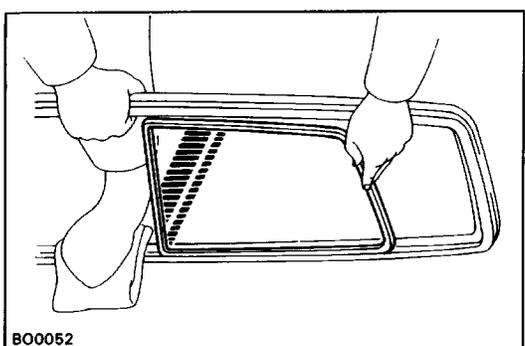

(b) Pull apart the channels and remove two non-slide glass panes as shown.

ASSEMBLY OF BACK WINDOW ASSEMBLY

1. INSTALL NON-SLIDE GLASS


- Apply soapy water to the contact surface of the weatherstrip and glass channel flange.
- Install two non-slide glass panes.
- Install two fix frames.

2. INSTALL SLIDE GLASS

Install two slide glass panes at the center area of the glass channel.

3. INSTALL FOLLOWING PARTS:

- Four screws holding two fix frames
- Back window slide glass channel stoppers

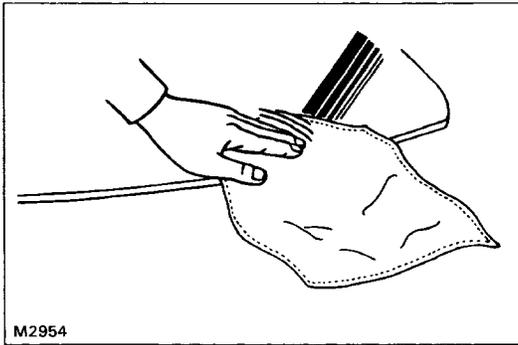


INSTALLATION OF BACK WINDOW

1. CLEAN BODY AND GLASS

Using cleaner, wipe off the contact surface of the body and the glass.

2. CLEAN WEATHERSTRIP

Using cleaner, clean the weatherstrip surface.

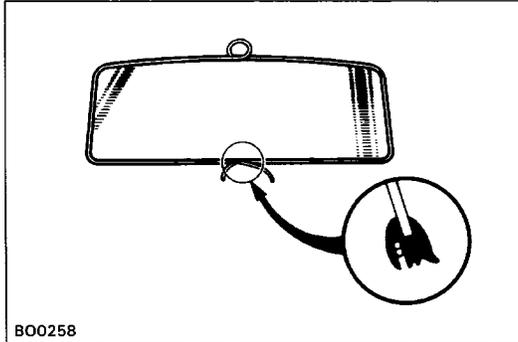


3. INSTALL WEATHERSTRIP ON BACK WINDOW

(a) Attach the weatherstrip to the back window.

NOTICE: If the weatherstrip has become hard, it may develop water leaks. Use a new one if possible.

(b) Apply a working cord along the weatherstrip groove as shown.

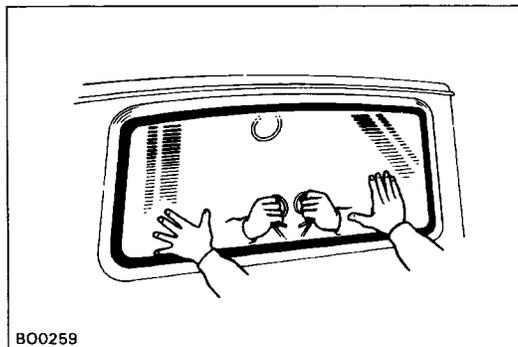


4. INSTALL BACK WINDOW

HINT: Begin installation in the middle of the lower part of the glass.

(a) Hold the back window in position on the body.

(b) Install the back window by pulling the cord from the interior, while pushing the outside of the glass with your open hand.

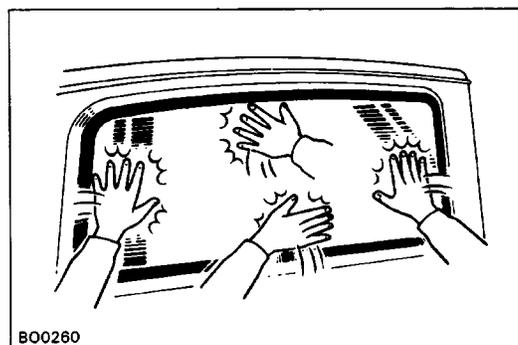

(c) To snug the back window in place, tap from the outside with your open hand.

5. INSPECT FOR LEAKS AND REPAIR

(a) Perform a leak test.

(b) Seal any leak with auto glass sealer.

Part No. 08830-00030 or equivalent